

BEACON[®] 

BEACON INDUSTRIES, INC.


12300 Old Tesson Rd.

St. Louis, MO 63128-2247 USA

OFFICE: 314-487-7600 FAX: 314-487-0100

Instruction Manual

Drum Positioner

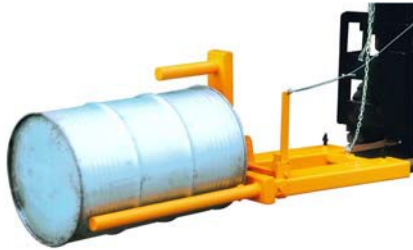

BVEDP-55



BHDT-500

Note: The Owner/Operator must read carefully and understand all the information presented here before operation.

THANK YOU FOR CHOOSING OUR DRUM POSITIONER. FOR YOUR SAFETY AND CORRECT OPERATION, PLEASE CAREFULLY READ THE MANUAL BEFORE USE.

NOTE: All of the information reported herein is based on data available at the time of printing. The factory reserves the right to modify its own products at any time without notice or incurring in any sanction. Please verify with the factory for possible updates.

This product is a special tool for transporting the drum. It can put the lying drum upright or opposition, and also transport easily. Its max capacity is 1500lbs.

1. PACKING

This product is packed with the board and soft foamy material. When open the packing, please check carefully whether it is good or has other problem. If the packing is damaged, please fill in list to mail provider and recode the model you bought.

2. NOTICE

WARNIGN: This drum positioner are used in specifically situation. Please attention to the proceeding as follow for using correctly.

- (1) Do not overload its rated capacity.
- (2) This products are designed for catching the drum, so you must screw down the drum lip.
- (3) Do not allow that use it as stack by personal.
- (4) Do not lift other object.
- (5) Do to lift the drum long time.
- (6) Check it carefully before use it, you need repair it in time if it had

- (7) Do not modify this product without the permission of the manufacture.

3. OPERATING INSTRUCTIONS

- (1) Put the drum positioner on the flat ground, then adjust the fork to fit the socket.
- (2) Tweak the T-bolt by hand and the drum positioner buckles the chain on the forklift. Check whether the T-bolt is incompact when use it.
- (3) Lift the drum lightly to near the drum for making the tube to extend the drum.
- (4) BVEDP-55 can turn as 90° with three-foot tube. There no hook and rod at the middle of the drum positioner. Rod is connected with the wire. Pull the rod by hand when the drum is upright, then the buckle will release automatically. If the drum is in horizontal, the buckle will hook automatically. Please the drum, then lay the fork down until the ground while the forklift move back. It can be raised and transferred after hooking the buckle automatically. When pull the wire, the forklift go forward while raising until the drum is in vertical.
- (5) BHDT-500 has a easy construction with two-tube fork. You only can move the fork without turning.

4. MAINTENANCE

This product is a jointing construction except the ring, T-bolt and chain. Please usually add the lube on the active position.

5. LIMITED WARRANTY

The product for 1 year when used properly within its rated capacity. The customer assumes liability for any modifications, unauthorized, repairs or parts substitution.

