

BEACON INDUSTRIES, INC.
12300 Old Tesson Road
St. Louis, MO 63128-2248
PH: 314-487-7600 - 800-454-7159 - Fax: 314-487-0100
www.beacontechnology.com

OWNER'S MANUAL

Model BABLT-____-____-____ Serial number _____


Assembly / Installation Instructions	2
Operation Instructions	3-4
Routine Maintenance & Safety Checks	5
Inspection & Testing Procedures (hoists)	6
Exploded Structural Parts Drawing & BOM	7-8

Electrical & Hydraulic Diagrams & BOM	9-12
Power Unit's Operation	13
Troubleshooting	14
Safety Label Identification	15
Warranty	16

IMPORTANT NOTES, WARNINGS AND SAFETY INSTRUCTIONS

Ensure that all employees understand and follow the following.

- ⚠ Failure to read and understand this owner's manual before using or servicing the lift table constitutes a misuse of the product. All persons who will install, use, or care for this product must be familiar with this material.
- The load must be removed and the platform fully raised, maintenance props installed and lowered until supported by the props before any work is performed on the unit.
- Ensure that all information / safety / warning labels stay in place and remain legible.
- Do not use the BABLT if any damage or unusual noise is observed.
- Always watch carefully the frame, platform and scissor legs along with the container when the lift table is in operation.
- Be sure to properly secure the frame to the floor before using.
- The scissor table is intended for installation / use only on compacted, improved surfaces.
- Supplied air must be clean, dry and regulated to a minimum of 80 p.s.i.
- Contact the manufacturer for any needed MSDS information.
- ◆ Do not perform any modifications to the scissor table without the manufacturer's approval. Failure to receive authorization for changes to the equipment could void the warranty.
- ◆ Maintenance and repairs are to be done only by personnel qualified to perform the required work. Consideration will not be given for warranty repair charges without prior written authorization by the manufacturer.

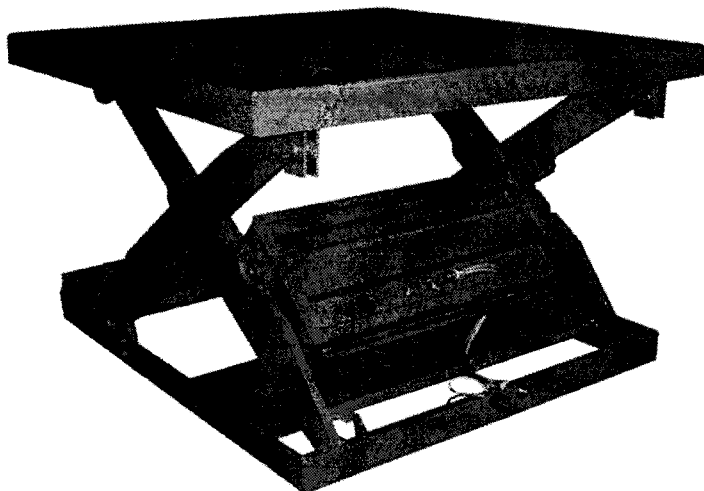

WHEN ORDERING

REPLACEMENT PARTS:

We take pride in using quality parts on the equipment we manufacture. We are not responsible for equipment problems resulting from the use of unapproved replacement parts.

To order replacement or spare parts for this equipment, contact the factory.

In any communication with the factory please be prepared to provide the machine's serial number, which is indicated on the machine dataplate.

RECEIVING INSTRUCTIONS

It is possible that this product could incur damage during transit.

Inspect the unit closely when it arrives. *If you see evidence of damage or rough handling to either the packaging or to the product when it is being unloaded, **immediately** make a note of it on the Bill Of Lading!*

It is important that you remove the product's packaging upon its arrival to ensure that there is no concealed damage or to enable a timely claim with the carrier for freight damage.

Also verify that the product and its specifications are as ordered.

