

BEACON INDUSTRIES, INC.  
12300 Old Tesson Road  
St. Louis, MO 63128-2247  
Ph: 314-487-7600 - 800-454-7159 Fax: 314-487-0100  
www.beacontechnology.com

# OWNER'S MANUAL

## Model - BUNI


Serial number \_\_\_\_\_

Installation Instructions .....	2	Electrical & Hydraulic Diagrams & BOM .....	9-10
Operation Instructions .....	3-4	Power Unit's Operation .....	11
Routine Maintenance & Safety Checks .....	5	Troubleshooting .....	12
Exploded Structural Parts Drawing & BOM .....	6-7	Safety Label Identification .....	13
Motor and Transformer Connections .....	8	Warranty .....	14

### IMPORTANT NOTES, WARNINGS AND SAFETY INSTRUCTIONS

Ensure that all employees understand and follow the following.

- Read and understand the owner's manual before using or servicing the BUNI-Tilt.
- The load must be removed and the platform supported or fully lowered before any work is performed on the lift.
- Ensure that all safety and warning labels stay in place and are legible.
- Do not use the BUNI-Tilt if any damage or unusual noise is observed.
- Always watch the platform and the container carefully when the tilter is in operation.
- Do not transport the BUNI-Tilt with any load on the platform.
- Do not use brake fluid or jack oils in the hydraulic system. If oil is needed, use an anti-wear hydraulic oil with a viscosity grade of 150 SUS at 100°F, (ISO 32 cSt @ 40°C), or Dexron transmission fluid.
- Contact the manufacturer for any needed MSDS information.
- ◆ Do not perform any modifications to the BUNI-Tilt without the manufacturer's approval. Failure to receive authorization for changes to the equipment could void the warranty.
- ◆ Maintenance and repairs are to be done only by personnel qualified to perform the required work. Warranty labor charges will not receive consideration without prior written authorization by the manufacturer.

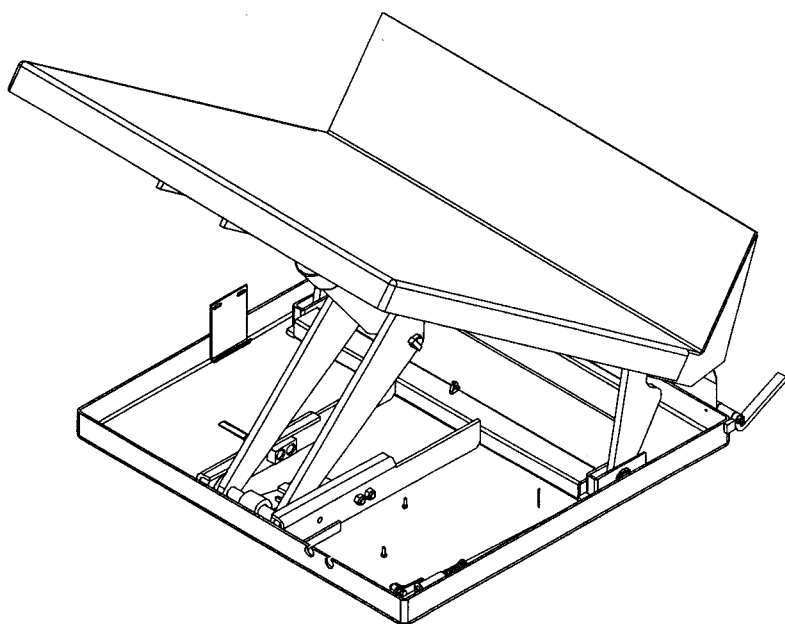

### WHEN ORDERING

#### REPLACEMENT PARTS:

We take pride in using quality parts on the equipment we manufacture. We are not responsible for equipment problems resulting from the use of unapproved replacement parts.

To order replacement or spare parts for this equipment, contact the factory.

In any communication with the factory please be prepared to provide the machine's serial number, which is indicated on the machine dataplate.

### RECEIVING INSTRUCTIONS

Every unit is thoroughly tested and inspected prior to shipment. However, it is possible that the unit could incur damage during transit.

Inspect the unit closely when it arrives. *If you see evidence of damage or rough handling to either the packaging or to the product when it is being unloaded, immediately make a note of it on the Bill Of Lading!*

It is important that you remove the product's packaging upon its arrival to ensure that there is no concealed damage or to enable a timely claim with the carrier for freight damage.

Also verify that the product and its specifications are as ordered.

